

## lumiteclighting.com

#### **Installation Instructions**

Lumitec flood lights should be installed by qualified persons only. Establish the electrical connections per ABYC guidelines. Light circuits should be protected with an appropriately sized fuse. Fuses on circuits with multiple lights should be sized accordingly. Lights are protected by an over-temperature circuitry and will not overheat.

## For Single Color "LT" Products (2 wires)

Wire lights as directed to any standard SPST "On/Off" switch and fuse properly. Simply turn the light On and Off. No additional instruction needed.

#### For 2 Color with Dimming Products (2 wires)

Note that the light ramps in intensity over a period of about 3 seconds on startup. To enable a "dimmed mode" simply interrupt the ramp in intensity with a brief off/on toggle of the power. Intensity can be set from a soft glow to full power. A subsequent off/on toggle allows the light to change colors.

#### For 2 Color - Flashing Products (3 wires)

Wire to any standard 3-way "On/Off/On" switch or 2 separate 2-way "On/Off" switches. The "red" wire controls the white light and can be dimmed using the method described above. The "orange" wire controls the flashing light.

rapel (600695)

Lumens: 1000+ Voltage: 10 - 30vDC

Color Temperature: 5000K (White)
Amps: 1.3A @ 12vDC / 600mA @ 24vDC
Housing: Powder Coated Aluminum
Limited Warranty: 3 Years

# www.lumiteclighting.com

**Note:** Your Engine Room Light may become warm or hot to the touch during normal operation. This is not damaging to the light or to normal mounting surfaces but care should be taken to avoid injury. The light should not be installed in enclosed or confined spaces which restrict airflow to the light. Overheating may cause the light to shut down partially or completely. If this occurs the light should be turned off and allowed to cool fully. Ensure that the light has ample air circulation before turning the light back on.

# IBIZA

# **ENGINE ROOM LIGHT**

Drill 1/4" Wire Exit Hole Pre-Drill For #6 Screws

3 Year Limited Warranty

warranty statement above is made or authorized by Lumitec, Inc. Any liability for consequential and incidental damages is expressly disclaimed Lumitec is not responsible for product failure caused by abuse, neglect, improper installation, or failure in applications other than those for which return product with freight prepaid. Lumitec will, at its option, repair or replace the product or defective portion without charge for parts or labor, it was designed, intended, and marketed. Should your Lumitec product prove defective during the warranty period, promptly notify Lumitec and The product is warranted to be free from defects in workmanship and materials for a period of three years from the date of original purchase. he warranty applying to the original product(s). No warranty or affirmation of fact, express or implied, other than as set forth in the limited or, at Lumitec's option, refund purchase price. Products repaired or replaced under this warranty shall umitec liability in all events is limited to, and shall not exceed, the purchase price paid